


TISPLUS SCAN HANDLE FOR ZEBRA MC95

1. MOUNTING

The TISPLUS Scan Handle can be used with the hand strap mounted.

However, we recommend to remove the MC95 hand strap before mounting the TISPLUS Scan Handle in order to maintain the possibility of exchanging the battery even with the Scan Handle assembled.

Removing the hand strap: Use a small screwdriver to push the mounting axis back on one side at the bottom of the MC95 and remove the hand strap diagonally from the axis.

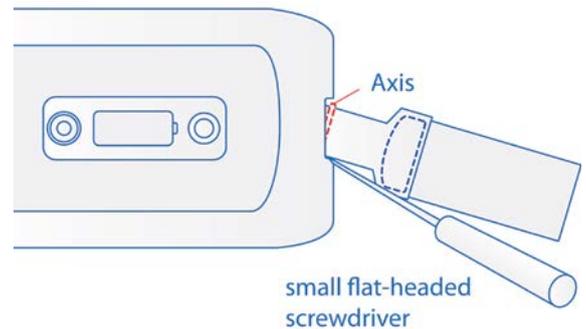

Push the TISPLUS Scan Handle onto the device until you hear a snapping sound.



Now press down the left and right hand side of the retaining clip until it snaps.

TISPLUS SCAN HANDLE FOR ZEBRA MC95

2. DEMOUNTING

First release the brackets of the retaining clip on the left and right hand side by pushing them firmly.



Firstly release the brackets of the retaining clip on the left and right hand side by pushing them firmly.



Now pull the device forwards and remove it from the TISPLUS Scan Handle.

3. CARE

Do not use oil to lubricate the mechanism. Oil detracts plasticizers from the material, the plastic parts become brittle.

Do not use harsh chemicals, cleaning solvents or strong detergents to clean the TISPLUS Scan Handle. Clean the TISPLUS Scan Handle with a damp cloth.