

TISPLUS SCAN HANDLE FOR ZEBRA MC40


1. RUBBER BOOT MOUNTING



The TISPLUS Scan Handle was designed for the use of MC40 with **mounted rubber boot** to offer optimum protection of the device during data capturing. **Please insert the MC40 into the rubber boot before using the TISPLUS Scan Handle.**

2. MOUNTING, LOCKING

Before sliding the MC40 into the TISPLUS Scan Handle ensure that the **release button** at the rear bottom side of the cradle is set to the **unlocked position (right picture)**.

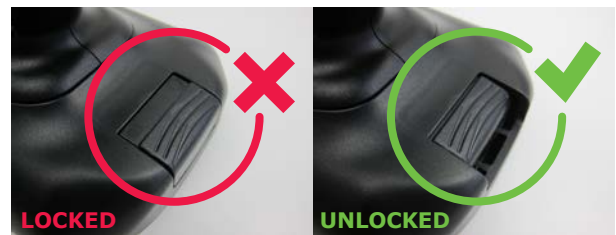

NOTE

It is not recommended to insert the MC40 with the release button set to locked position, because this will overstress the lock hooks and reduce the locking force. In the long run it can damage the entire locking mechanism.

3. DEMOUNTING, REMOVING

Press the release button at the bottom of the cradle upward until it unlocks and then push it forward until the stop.



Now pull the device forward and remove it from the TISPLUS Scan Handle.



Push the MC40 into the cradle until the release button snaps into its locked position.



4. CARE

Only clean the TISPLUS Scan Handle with a damp cloth. Do not use oil to lubricate the mechanism. Oil detracts plasticizers from the material, the plastic parts become brittle. Do not use harsh chemicals, cleaning solvents or strong detergents to clean the TISPLUS Scan Handle.